




Model T1 Faucet Filter


INSTALLATION AND OPERATING INSTRUCTIONS

(Please read carefully and retain for future use)

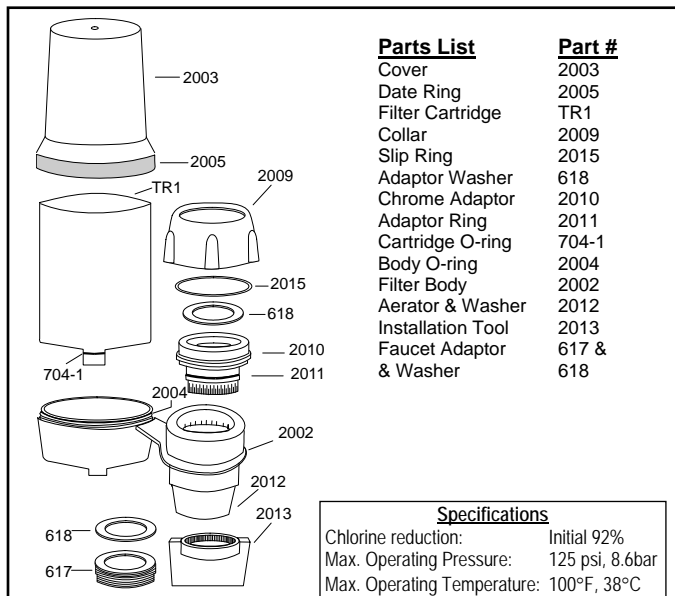

CONNECTING THE ADAPTOR ASSEMBLY (Fig. 1)

- Remove faucet aerator.
- Place knurled end of Chrome Adaptor in Installation Tool.
- Place Adaptor Washer in Chrome Adaptor.
- Place Slip Ring on shoulder of Chrome Adaptor.
- Place Collar over Chrome Adaptor to complete Assembly.
- Now screw Adaptor Assembly onto faucet using Installation Tool and **tighten firmly by hand**. Do not tighten with pliers. Remove Installation Tool when finished.



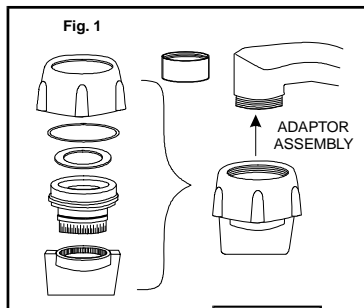


Note: If faucet has internal threads - Screw Faucet Adaptor into Adaptor Assembly and place Washer on top (Fig. 2) before screwing into faucet. If none of the adaptors fit your faucet, consult with a plumbing supply store or call the Rainfresh Help Line.

CONNECTING THE FILTER UNIT

Your Filter is shipped in the OFF position. It should be installed on the left side of the faucet (Fig. 3). When installed, the Faucet Filter swings back out of the way to the OFF position (unfiltered water) and forward to the ON position (filtered water).


- Bring Filter up to Adaptor Assembly and thread Collar onto Filter until Collar contacts Filter deck (Fig. 4) and **tighten firmly by hand**. **Important:** Collar must firmly contact Filter deck for proper swing motion of filter (Fig. 5)

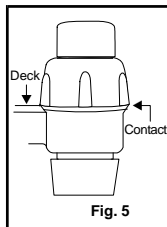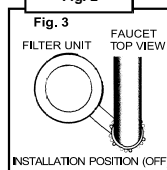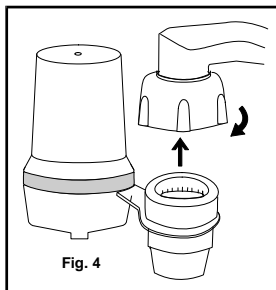

- To install the Filter Cartridge, unscrew cover, **remove shrink wrap** and place cartridge in filter unit. Replace cover

USING YOUR RAINFRESH FAUCET FILTER (Fig. 6)

- For filtered water, swing Filter gently forward to ON position (water exits cartridge). For unfiltered water, swing Filter back to OFF position (water exits aerator). The Filter stops moving at each of these positions.
- Note:** Do not move the Filter past the ON or OFF position stops as this will tighten or loosen the Chrome Adaptor unnecessarily.
- Run filtered water for 2 minutes to flush any carbon fines from new Cartridge. Before each use run water for 3 seconds.
- Caution:** Use only cold water (Max. Temp 100°F, 38°C) when your Faucet Filter is in the filtered (ON) position. Filtering hot water may damage the Filter components. Hot water can be used in the unfiltered (OFF) position.

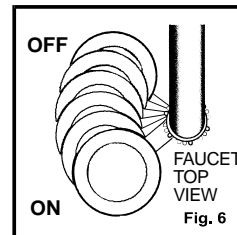

REPLACING YOUR FILTER CARTRIDGE / SETTING THE DATE RING

Replace Cartridge every 3 months or 200 gallons (750 litres). Life is directly dependent on water conditions and volume of water filtered. Local water conditions may require more frequent replacement.

- Unscrew cover and remove used cartridge. **Remove shrink wrap** from new cartridge and place in filter unit. Replace cover.
- Set Date Ring to 3 months ahead. This is your Cartridge replacement date.
- Run filtered water for 2 minutes to flush any carbon fines from new Cartridge. Before each use run water for 3 seconds.
- Note:** If filter is left unused for 3 days or more, flush for 1 minute before use.

MAINTENANCE / CAUTIONS

- Caution:** Use only on municipally treated or microbiologically safe water. Do not use on untreated water without adequate disinfection before the unit.
- Caution:** Do not connect a portable dishwasher to your Faucet Filter.
- Protect Filter from freezing temperatures. Drain unit if freezing temperatures exist.
- Protect Filter from direct sunlight. Not intended for outdoor use.
- Do not use teflon tape on threaded connections.
- Body O-ring may be lubricated periodically with non-petroleum based lubricant.

PROBLEM / SOLUTION GUIDE

Problem	Solution
Leaking around Cover	Check O-ring and replace if necessary.
Leaking around Adaptor Assembly	Unscrew Collar and remove Filter. Check Adaptor Washer(s) and replace if necessary. Re-tighten assembly with Installation Tool.
Poor water flow or bad taste/odour in filtered (ON) position	Replace Filter Cartridge.
Poor water flow in unfiltered (OFF) position	Remove and clean Aerator.
Water comes out of both outlets at same time to deck.	Check that collar is screwed down firmly to deck.
Filter swings past ON or OFF stop position	Contact Rainfresh Help Line.
Can't stop leaking problems	Contact Rainfresh Help Line.

LIMITED WARRANTY

This filter housing is warranted to the original Consumer purchaser for a period of 1 year, from the date of purchase, against defects in material or workmanship. The Company's obligation under this warranty shall consist of repair or replacement, at its option, of any part found by Company inspection to be defective, provided that the product has not been misused, abused, altered or damaged as determined by the Company and provided that only approved Rainfresh replacement cartridges have been used in the housing. This warranty does not apply to the replacement cartridge(s) which by nature will diminish in performance through normal use and require(s) regular replacement.

Thank you for purchasing one of our water filters. We are committed to ensuring that you are totally satisfied. If you have any problem, don't go back to the store — please give us a call !

TOLL FREE HELPLINE 1-800-667-8072
Toronto & Area: (905) 884-9388
www.rainfresh.ca



ENVIROGARD PRODUCTS LIMITED
 446 Major Mackenzie Dr. E., Richmond Hill, ON L4C 1J2, Canada
 P.O. Box 64, Richmond Hill, ON L4C 4X9, Canada



© COPYRIGHT "ENVIROGARD PRODUCTS LIMITED 2003"
 ALL RIGHTS RESERVED

2018-09/03